

6

Using the Player

1. Connect the supplied earphones or optional headphones into the MULTIFUNCTION port on top of the Rio player.
2. Turn the player ON.

Playing Music

1. Press PLAY/PAUSE ►|| to begin playback. Press ENTER to cycle through the player's various screens.

If you are coming from Stopwatch mode:

1. Press MENU.
2. Press PLAY/PAUSE ►|| or STOP ■ to navigate to Play Music.
3. Press FORWARD ►► to select Play Music. The following options display:
 - Play All: Plays all tracks.
 - Play Track: Displays track list you can choose from to play.
4. Press PLAY/PAUSE ►|| or STOP ■ to navigate within Play Music options; Press FORWARD ►► to select an option and begin playback.

Setting/Releasing Hold

Press and hold MENU, then press ENTER to put the Rio player into or out of Hold mode. Hold locks the Rio player buttons — except the OFF/ON switch — preventing accidental operation. When the player is in Hold mode, a lock icon appears on the display, and the player displays a message if the player buttons are pressed indicating that Hold mode is active.

Using the Stopwatch


In Stopwatch mode, Lap Statistics shown at the bottom of the LCD toggle between Average Lap Time and Current to Average Lap Time Difference.

1. Press MENU.
2. Press PLAY/PAUSE ►|| or STOP ■ to navigate to Stopwatch.
3. Press FORWARD ►► to select Stopwatch mode.
 - Press PLAY/PAUSE ►|| to start and stop the timer without resetting the timer value.
 - Press STOP ■ to reset the timer value to zero.
 - Press ENTER to move lap times down on the LCD; if the timer is running, press ENTER to capture a new lap time without stopping the timer.
 - Press and hold ENTER to reset all lap times to zero.




For detailed instructions and descriptions please see the User's Guide located on the software CDs


Location of Controls

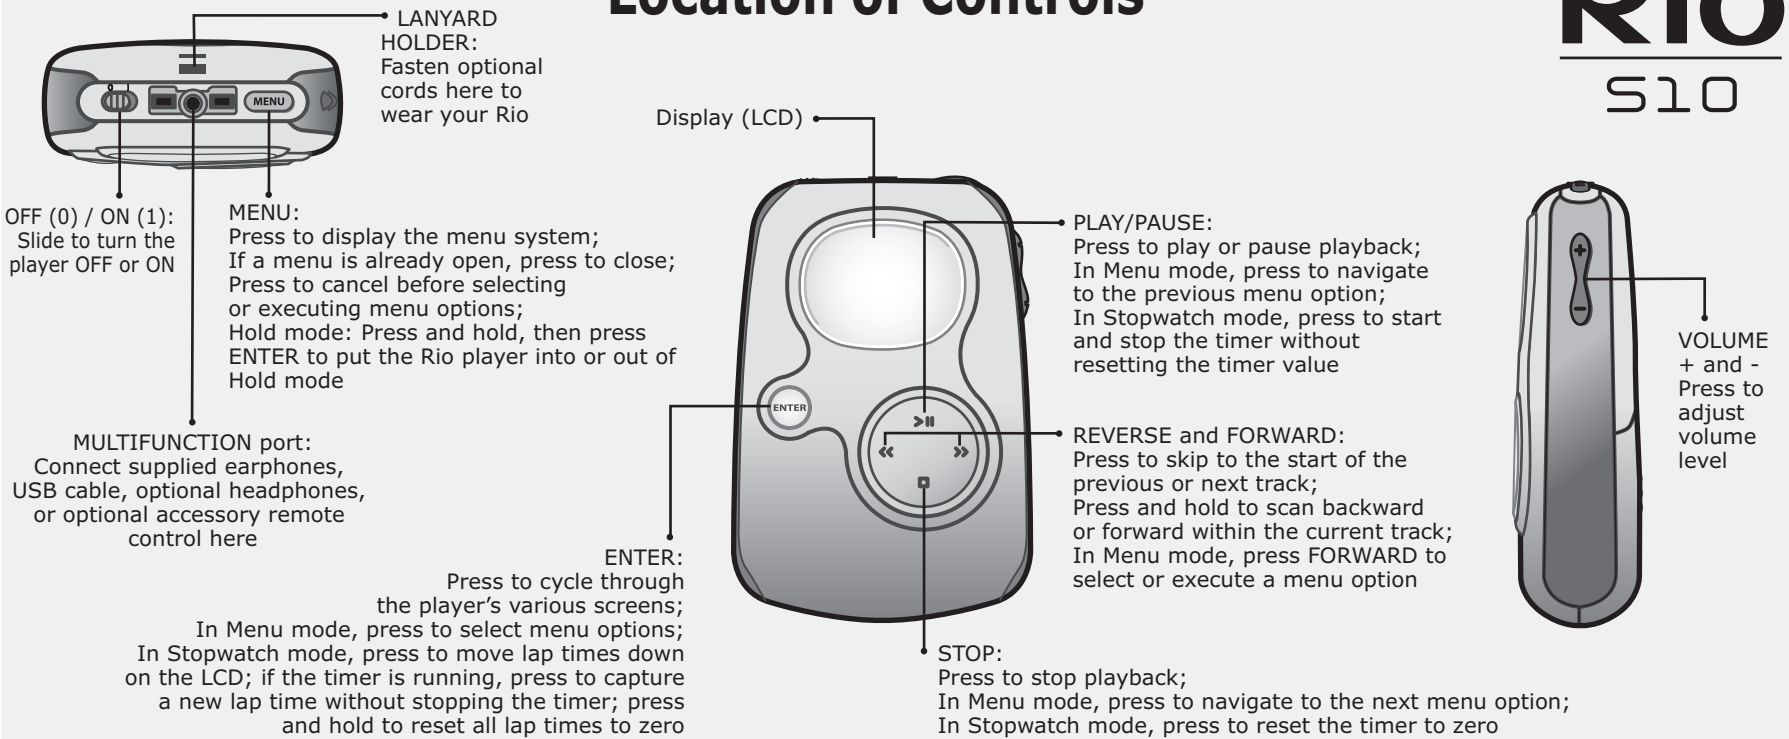

Player Mode

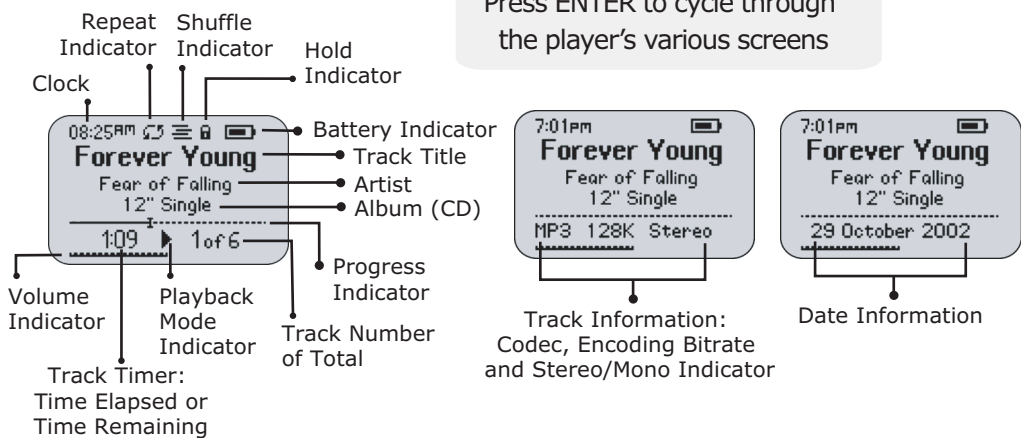 


Stopwatch Mode

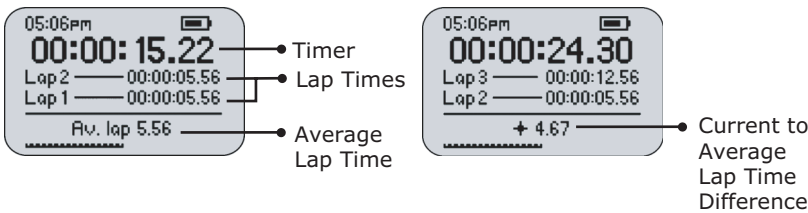 

LCD Overview

 Menu Mode

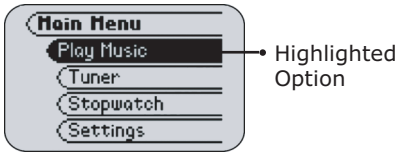

Customer Care

Web site

www.sonicblue.com/support

E-mail

customersupport@sonicblue.com

Technical Support Telephone

Call for answers to technical questions about your product.
(503) 453-1640

Customer Service Telephone

Call for SONICblue sales and general product information.
(800) 468-5846

Hours

Please check the support Web site for the current hours of operation.

SONICblue™

© 2002 SONICblue Incorporated. All Rights Reserved.

SONICblue Incorporated shall not be liable for any errors contained herein or for any damages arising out of or related to this document or the information contained herein, even if SONICblue has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. SONICblue reserves the right to make changes in the specifications and other information contained in this document without prior notification. SONICblue disclaims any obligation to update the information contained herein. Rio® is a registered trademark of SONICblue Incorporated. SONICblue is a trademark of SONICblue Incorporated.

This product is iTunes ready. iTunes is provided by Apple Computer, Inc. © 2002 Apple Computer, Inc. All rights reserved. iTunes is a trademark of Apple Computer, Inc. Mac and the Mac logo are trademarks of Apple Computer, Inc. registered in the United States and other countries. Microsoft, Windows Media, and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. All other product names may be trademarks of the companies with which they are associated.

WARNING

To reduce the chance of shock or injury, do not use or operate this device in or near water or wet locations. Do not spill liquid on this device.

Risk of electric shock — Do not disassemble or modify this device. No user-serviceable parts are inside. Refer servicing to qualified personnel.

Do not use in places exposed to strong magnetic or electrostatic fields (close to TV or speakers). Do not use in places where the humidity is excessively low.

CAUTION

Risk of explosion, damage or battery leakage is possible if the battery is replaced incorrectly or by an incorrect type. Dispose of used batteries according to instructions or local laws.

Use of headphones while operating a vehicle is not recommended and is unlawful in some states and areas. Be careful and attentive while driving. Stop operating this device if you find it disruptive or distracting while operating any type of equipment.

Listening to music at full power over extended periods of time can be damaging to the hearing of the user.

Accessories

for your Rio player can be found online at store.sonicblue.com

Product Care

- Exposure to extreme hot or cold temperatures may cause damage to your Rio player or cause it to malfunction. Do not expose your Rio player to direct sunlight continuously or leave it in a vehicle with the doors and windows closed. The case may become deformed or discolored or the Rio player may malfunction. Do not use your Rio player near an open flame.
- If moving from a cold environment to a warm environment, let the Rio player's temperature stabilize before operation.
- Keep dirt, sand, dust, and moisture from entering your Rio player. Do not use in areas of excessive dust. Do not use in places where the humidity is excessively high.
- Do not drop or subject your Rio player to shock.
- If interference occurs close to radios or televisions, move your Rio player away from them.
- Do not clean your Rio player with solvents, chemicals or abrasive cleaners. If necessary, use a soft cloth to clean your Rio player.